

SmartTrace®

APPLICATION INSTRUCTIONS FOR CARS



0800 141 2543 | www.shop.smartwater.com



KC110

> RE-APPLYING SMARTTRACE®

If re-applying SmartTrace, please attempt to apply the new liquid to areas that have not, previously, been marked. If uncertain, please check for the presence of a previous application using an ultraviolet light (long wave, 365nm) - where any areas previously marked will glow a bright yellow-green. By following these instructions, you will help simplify analysis in the event of theft and subsequent recovery of the marked item.

> HEALTH & SAFETY / FIRST AID


Keep SmartTrace out of reach of children. SmartWater suggest that gloves and eye protection are used during application. Please clean up spillages, they can create a slip hazard. Contact with eyes: rinse with plenty of water for at least 15 minutes. Contact with skin: immediately wash the area with soap and water. If SmartTrace has been accidentally swallowed: wash out mouth with water and consult a doctor if any symptoms develop.

> DISPOSAL INSTRUCTIONS

Please dispose of any out-of-date or unwanted SmartTrace in accordance with your policy for the disposal of controlled waste. This work must be carried out by a contracted service provider or by your local authority and is a legal requirement (Environmental Protection Act, 1990). Please remove all labelling from the bottle prior to disposal to ensure no one else attempts to use or register your SmartTrace forensic liquid. The SmartTrace forensic liquid in this bottle is valid for one vehicle only please notify us in writing if you change your vehicle. Please refer to www.smartwater.com/coa for instructions on how to update your address details.

WHERE SHOULD I APPLY SMARTTRACE®?

1. Alternator
2. Battery housing
3. Vin plate
4. Alloy wheels
5. Underside of bonnet
6. Stereo system
7. Interior trim
8. Underside of bonnet
9. Spare wheel / jack
10. Catalytic converter*

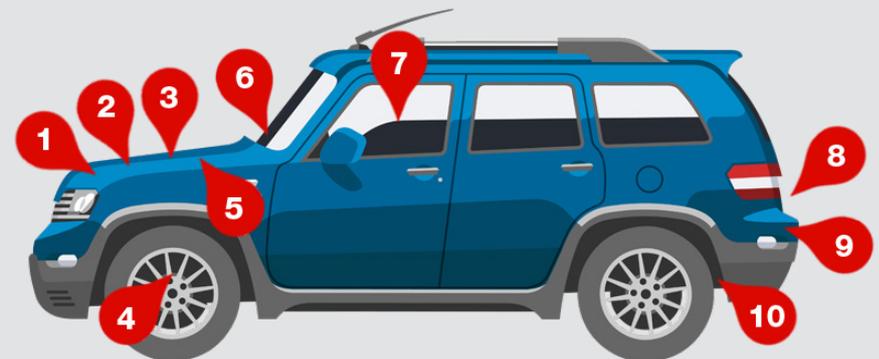

*Catalytic converters and exhaust components require SmartTrace HT forensic liquid.



STEP 1

Ensure that all areas that you plan to mark are clean and dry before applying SmartTrace®. Avoid smooth surfaces and apply to those that are uneven or irregular. See overleaf for recommended areas to mark.



STEP 2

Shake the bottle for approximately 10 seconds before use.



STEP 3

Insert the applicator into the bottle, collecting a small amount of liquid.

 The liquid is touch dry within 30 minutes, but will take 24 hours to cure completely.



STEP 4

Apply a small dab to the areas of the car you wish to protect. This will be sufficient to recover the unique code, should the component be stolen and later found.

THINGS TO AVOID

- > DON'T dilute your SmartTrace forensic liquid.
- > DON'T write with the liquid.
- > DON'T apply to smooth surfaces.
- > DON'T apply while the engine is running.
- > DON'T apply the liquid in conditions in which frost can form.
- > DON'T apply the liquid to functional parts such as electronic ports or displays.
- > DON'T apply the liquid to external surfaces if it is raining.
- > DON'T apply the liquid to moving parts such as nuts, keys or switches.



SmartWater is best stored at room temperature.



STEP 7

Once you finished applying SmartTrace, the applicator needs to be rinsed under a tap, stored securely and the lid replaced on the bottle, so that it can be used again if required.



STEP 6

Register at www.smartwater.com/registration to ensure marked components can be identified if lost or stolen.



STEP 5

Place the supplied deterrent signage on the the inside of the windscreen or side window.