

# SmartTrace HT™

## APPLICATION INSTRUCTIONS FOR CATALYTIC CONVERTERS



0800 141 2543 | [www.shop.smartwater.com](http://www.shop.smartwater.com)



KC108

### > HEALTH & SAFETY / FIRST AID

Keep SmartTrace® out of reach of children. Gloves and eye protection must be used during application of SmartTrace® High Temperature liquid. SmartTrace® High Temperature liquid should only be applied in a well ventilated area. Please clean up spillages, they can create a slip hazard. Contact with eyes: rinse with plenty of water for at least 15 minutes. Contact with skin: immediately wash the area with soap and water. Swallowing SmartTrace®: wash out your mouth with water and consult your doctor if any symptoms develop.

### > DISPOSAL INSTRUCTIONS

Please dispose of any out-of-date or unwanted SmartTrace® High Temperature liquid in accordance with your policy for the disposal of controlled waste. This work must be carried out by a contracted service provider or by your local authority and is a legal requirement (Environmental Protection Act, 1990).

Please remove all labelling from the bottle prior to disposal to ensure no one else attempts to use or register your SmartTrace® forensic liquid. The SmartTrace® forensic liquid in this bottle is valid for your address only. Please refer to [www.smartwater.com/coa](http://www.smartwater.com/coa) for instructions on how to change your registered address or other contact details.

## WHAT IS SMARTWATER® SMARTTRACE® HIGH TEMPERATURE?

SmartTrace® High Temperature is specially formulated to tolerate extreme temperatures, providing an effective and robust means for protecting your Catalytic Converter.

SmartTrace® is simply brushed on to your Catalytic Converter, providing instant protection. The liquid contains a unique forensic code that creates an irrefutable link back to the vehicle in the event of a theft and subsequent recovery.

Because of SmartWater's ability to link offenders back to the scene of their crime, the SmartWater brand serves as a powerful deterrent.

In fact, 74% of criminals said they would not commit a crime at a location displaying SmartWater deterrent signage.\*


\* Perpetuity Research and Consultancy. An Evaluation of SmartWater: Offenders' Perspectives.

## WHERE SHOULD I APPLY SMARTWATER® SMARTTRACE® HIGH TEMPERATURE?

ONLY apply SmartTrace® to catalytic converters.

Once applied SmartTrace® may leave a pale white mark.

There is a range of other vehicle products available at <https://shop.smartwater.com/>

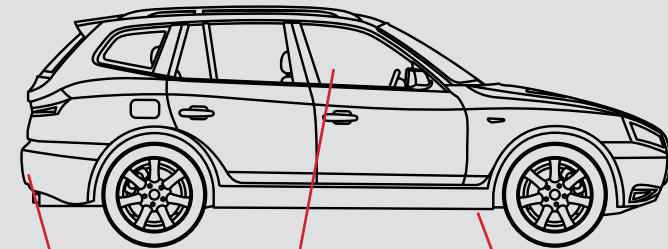


Bumper label

Window label

SmartTrace® on Catalytic converter

Place the supplied deterrent signage on the bumper of the car, above the exhaust pipe and on the inside of the windows.

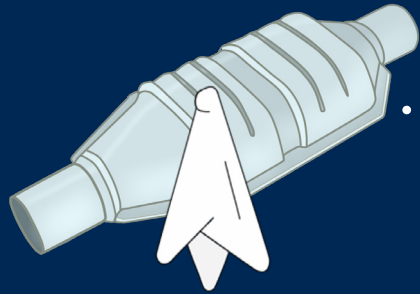


## STEP 1

Make sure the engine is off and allow it to cool before application. Ensure that all areas you plan to mark are clean and dry before applying SmartTrace®. Avoid smooth surfaces, instead apply to those that are uneven or irregular.



## STEP 2

Shake the bottle for approximately 10 seconds before use.

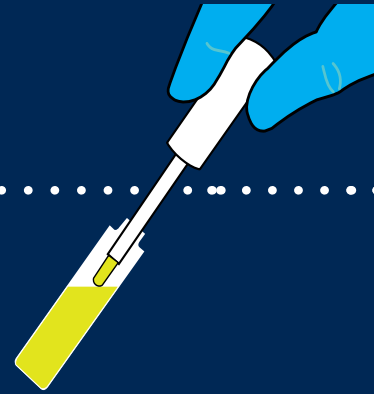


## STEP 3

Insert the applicator into the bottle, collecting a small amount of liquid.



Apply 3 layers of 2-3cm line of SmartTrace® to the same area with 30 minute intervals between each layer. Allow 24 hours to fully cure.

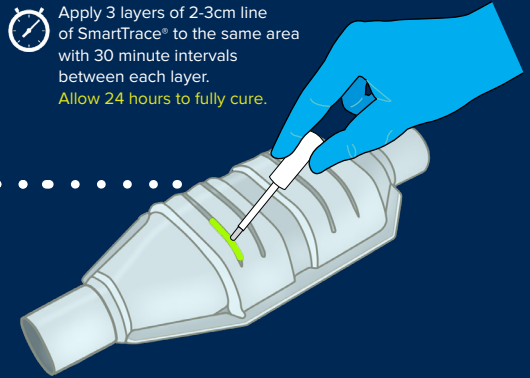

## STEP 4


Apply SmartTrace® to the area you have selected. This will be sufficient to recover the unique code, should the catalytic converter be stolen and later found.

## THINGS TO AVOID

- > DON'T dilute your SmartTrace® forensic liquid.
- > DON'T write with the liquid.
- > DON'T apply to smooth surfaces.
- > DON'T apply the liquid in conditions in which frost can form.
- > DON'T apply when engine is on.
- > DON'T apply when catalytic converter or other components are hot.
- > DON'T smoke while applying the liquid.



SmartTrace® is best stored at room temperature.

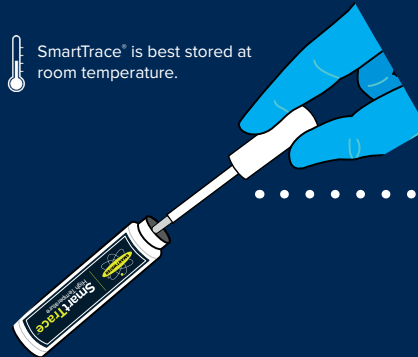

## STEP 7

Once you finished applying SmartTrace®, the applicator needs to be placed back in the bottle and stored securely, so that it can be used again if required.



## STEP 6

**IMPORTANT!**  
Register at [www.smartwater.com/registration](http://www.smartwater.com/registration) to ensure marked assets can be identified if lost or stolen.\*



## STEP 5

Place the supplied deterrent signage on the bumper of the car, above the exhaust pipe and on the inside of the windows.